



ELECTRIC LIFTING BASKET INSTALLATION MANUAL

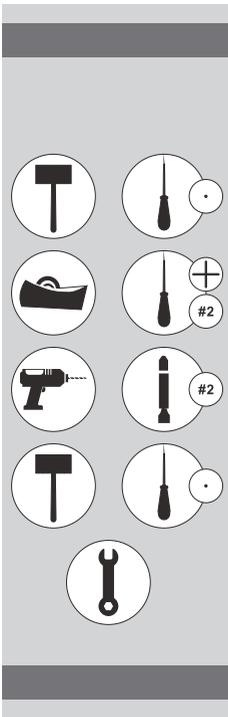

Accessories list		
S/N	Name	Quantity
1	Main frame	1
2	Basket	1
3	Base	2
4	Battery	3
5	Screw	4
6	Screw	8
7	Screw	8

Product size	
D/Size D	Size of product
600	564 x 265 x 590mm
700	664 x 265 x 590mm
800	764 x 265 x 590mm
900	864 x 265 x 590mm

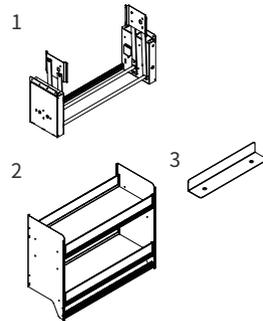


一、 Installation Steps

Installation step 1


Standard Cabinet
Put the product in the cabinet, set the distance between the two sides to 60-70mm, and pull the product off the lock screw ⑥. Put the battery on the basket and lock it on the main frame.

Installation step 1

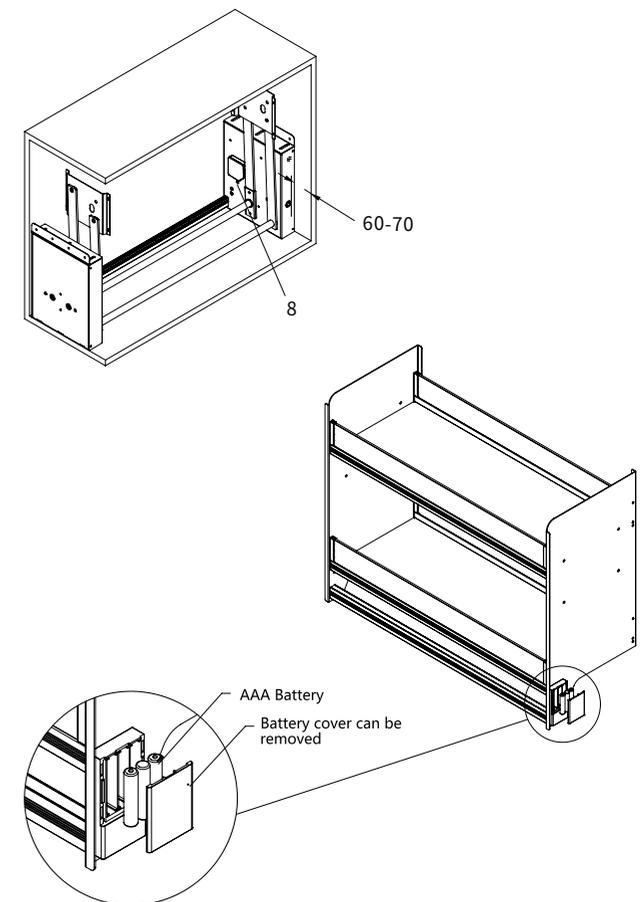


Notice:

1. Please read the installation manual carefully before installation.
2. It is applicable for cabinets with 16-18 MM thickness panel, height ≥ 600 MM and depth ≥ 280 MM.
3. This product's width is adjustable. The adjusting width is up to 50MM.

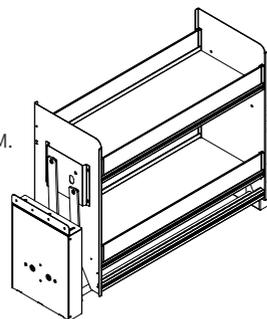

Installation step 2

If the cabinet is not standard, first measure the width of the cabinet, and then adjust the product to the appropriate size.

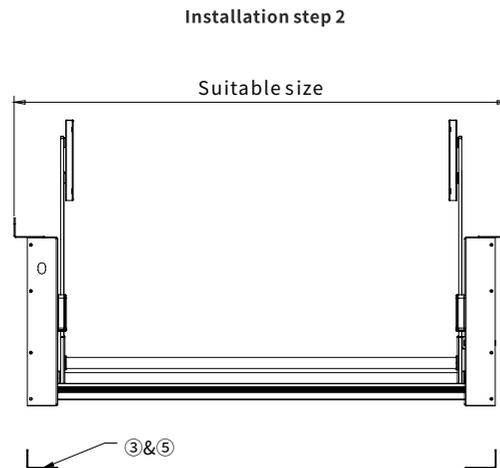

二、 Operation Steps

1. This product is suitable for touch and voice control operation.
2. After the power is turned on, press the switch on the right side of the main frame and the reminding voice will come out, indicating that the power is turned on.
3. The touch bar is under the basket. Touch it once to descend, touch again to stop, touch once more to rise.
4. The voice control operation mode is, the slogan "Tally, Tally" wakes up the machine; the "cabinet falls" or "start to fall", the basket falls; the "cabinet rises" or "starts to rise" and the basket rises; "turn on mute", basket is silent mode; "Lighting off", basket lighting is off.
5. Voice control is an auxiliary function, which is greatly affected by noise, and the main function is touch sensor.
6. If forget to turn off and there is no operation,, it will automatically turn off in 5 minutes.

三、 Precautions

1. Prohibit unauthorized disassembly, repair and alteration.
2. Can Not bear more than 15 kg of goods.
3. Do Not flush, easy to cause short circuits and other failures.
4. Do not store wet items, kitchen utensils need to be dry before putting.
5. The height of the upper storage should not exceed 230mm
5. Do not put in or take out any items when machine is working, avoid personal injury.

四、 Specification

Model	PO6257/ 600/700/800/900 mm
Voltage	220V
Electric	100W
Running time	12seconds
Lifting distance	590mm